

CR MARINE MOORING SNUBBER INSTRUCTIONS




Instructions

- 1. Determine location of snubber on the line
- Thread line through holes as indicated. Wrap 1 (calm) to 3 (extreme) turns depending on tidal and wave conditions. DO NOT WRAP MORE THAN 3 TIMES, as this could strain the snubber and shorten its useful life.
- Double check snubber placement and that lines have been threaded properly. Pull hard on the line to force it securely down between locking elements.

NOTE: It is recommended to have a snubber on every line. For use with high-stretch dock lines only



Certified to ISO 9001:2000, Including Design

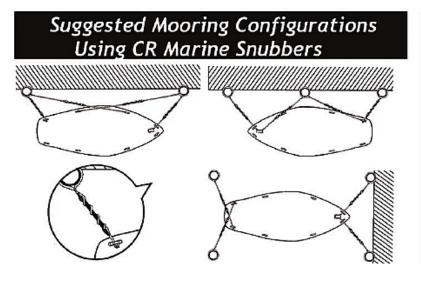

Part No	. Line
101667	3/8"
101692	1/2" to 5/8"
101666	5/8" to 3/4"
101693	3/4" to 1"

WARRANTY INFORMATION

Custom Rubber Corp. makes no and disclaims all express or implied warranties other than warranties set forth herein, including, without limitation, the warranties of merchantability, fitness for a particular purpose, or from any course of dealing or trade usage.

Custom Rubber Corp. shall not be liable for special, indirect, incidental, punitive or consequential damages, including, without limitation, damages for loss of opportunity or business profits, business interruption or any other loss even if Custom Rubber Corp. has been advised of the possibility of such damages.

All products and services sold or provided by Custom Rubber Corp. are subject to Custom Rubber Corp.'s standard terms and conditions, which may be found at

http://www.customrubbercorp.com/top.htm

http://www.customrubbercorp.com/tos.htm

In no event shall Custom Rubber Corp. be liable for any amount in excess of the purchase price paid.

